YK350XG

Arm length 350mm
Maximum payload 5kg

YK350XG - 150

Cable

RCX340-4

■ Ordering method

Tool flange - Hollow shaft No entry: None
F: With tool flange

No entry: None
S: With hollow shaft

Standard type: Small type

Controller

Specify various controller setting items. RCX340 ▶ P.678

■ Specifi	cations					
			X-axis	Y-axis	Z-axis	R-axis
Axis	Arm length		200 mm	150 mm	150 mm	-
specifications	Rotation angle		+/-140 °	+/-144 °	-	+/-360 °
AC servo motor output			200 W	150 W	50 W	100 W
Deceleration mechanism	Transmission	Motor to speed reducer	Direct-coupled			
	method	Speed reducer to output	Direct-coupled			
Repeatability Note 1			+/-0.01 mm +/-0.01 mm +/-0.0		+/-0.004 °	
Maximum speed			5.6 n	n/sec	1.1 m/sec	1020 °/sec
Maximum payload			5 kg (Standard specification), 4 kg (Option specifications Note 4)			
Standard cycle time: with 2kg payload Note 2			0.44 sec			
R-axis tolerable moment of inertia Note 3			0.05 kgm² (0.5 kgfcms²)			
User wiring			0.2 sq × 10 wires			
User tubing (Outer diameter)			ф 4 × 3			
Travel limit			1.Soft limit 2.Mechanical stopper (X,Y,Z axis)			
Robot cable length			Standard: 3.5 m Option: 5 m, 10 m			
Weight			19 kg			

Note 1. This is the value at a constant ambient temperature. (X,Y axes)

Note 2. When reciprocating 300mm in horizontal and 25mm in vertical directions

Note 3. The acceleration coefficient is set automatically in accordance with the tip weight and R-axis moment of inertia settings.

Note 4. Maximum payload of option specifications (with tool flange attached or with user wiring and tubing routed through spline shaft) is 4kg.

Controller							
Controller	Power capacity (VA)	Operation method					
RCX340	1000	Programming / I/O point trace / Remote command / Operation using RS-232C communication					

Note. The movement range can be limited by changing the positions of X and Y axis mechanical stoppers. (The movement range is set to the maximum at the time of shipment.)

See our robot manuals (installation manuals) for detailed information.

Note. To set the standard coordinates with high accuracy, use a standard coordinate setting iid (ontion). Pafer to the user's

standard coordinate setting jig (option). Refer to the user's manual (installation manual) for more details.

Our robot manuals (installation manuals) can be downloaded from our website at the address below https://global.yamaha-motor.com/business/robot/



