■ Installation conditions

- Install the TS-SD inside the control panel.
- Install the TS-SD on a vertical wall.
- Install the TS-SD in a well ventilated location, with space on all sides of the TS-SD (See fig. at right.).
- Ambient temperature: 0 to 40°C
- Ambient humidity : 35 to 85% RH (no condensation)

